

**Unplugging connector at coolant temperature gauge sender -G2-/coolant temperature sender -G62- - vehicles with 1.4 I MPI engine**

**Sequence of operations**

The coolant temperature gauge sender -G2-/coolant temperature sender -G62- is located at the coolant connection on the left of the cylinder head.

- Unplug the connector -arrow- at the coolant temperature gauge sender -G2-/coolant temperature sender -G62-.

