



Checking tensioning roller for coupling drive toothed belt

Removing

- Remove engine mounting → Chapter.
- Release retaining clips -arrows- and detach cover (top) for toothed belt.

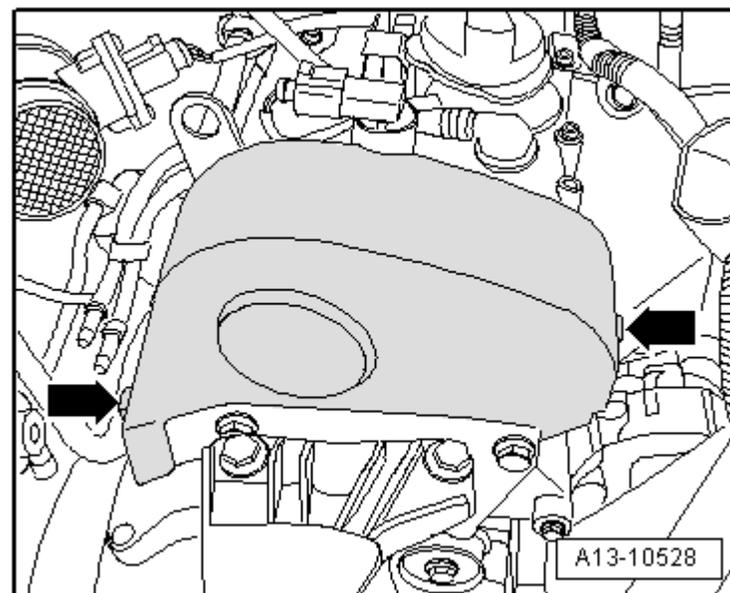

- Remove bolts -arrows- and detach engine support -1-.

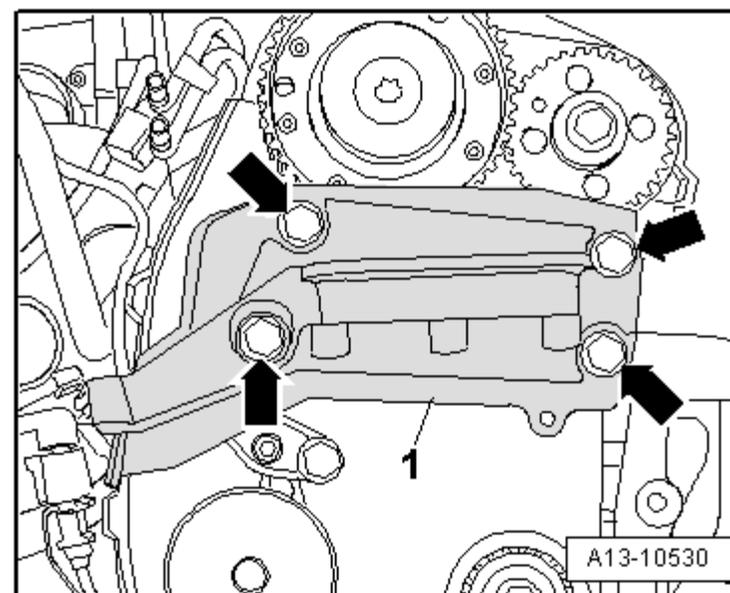

- Note position of indicator -1- on tensioning roller and push in toothed belt with firm thumb pressure -arrow-.
- The indicator must move to the side.
- Release tension on toothed belt.
- Turn crankshaft 2 rotations in direction of engine rotation.
- Check position of indicator on tensioning roller.
- The indicator must move back to its normal position.
- Renew the tensioning roller if the indicator does not return to its previous position.

Assembling

- Tightening torque → [Chapter](#)

Installation is carried out in the reverse order; note the following:

- Install engine support and engine mounting → [Chapter](#).

