

Removing and installing fuel pressure regulator and fuel metering valve

1 - Fuel metering valve -N290-

2 - Connector

- Black, 2-pin

3 - T-piece

4 - Fuel supply line

- From fuel tank
- Secure with spring-type clips
- Check that it is securely seated

5 - Fuel supply line

- To metal fuel line
- Secure with spring-type clips
- Check that it is securely seated

6 - Fuel return line

- From fuel pressure regulating valve -N276-
- Secure with spring-type clips
- Check that it is securely seated
- Blue marking

7 - Circlip


8 - Fuel pressure regulator

9 - O-ring

- Renew if damaged

10 - Fuel return line

- To fuel tank
- Blue marking

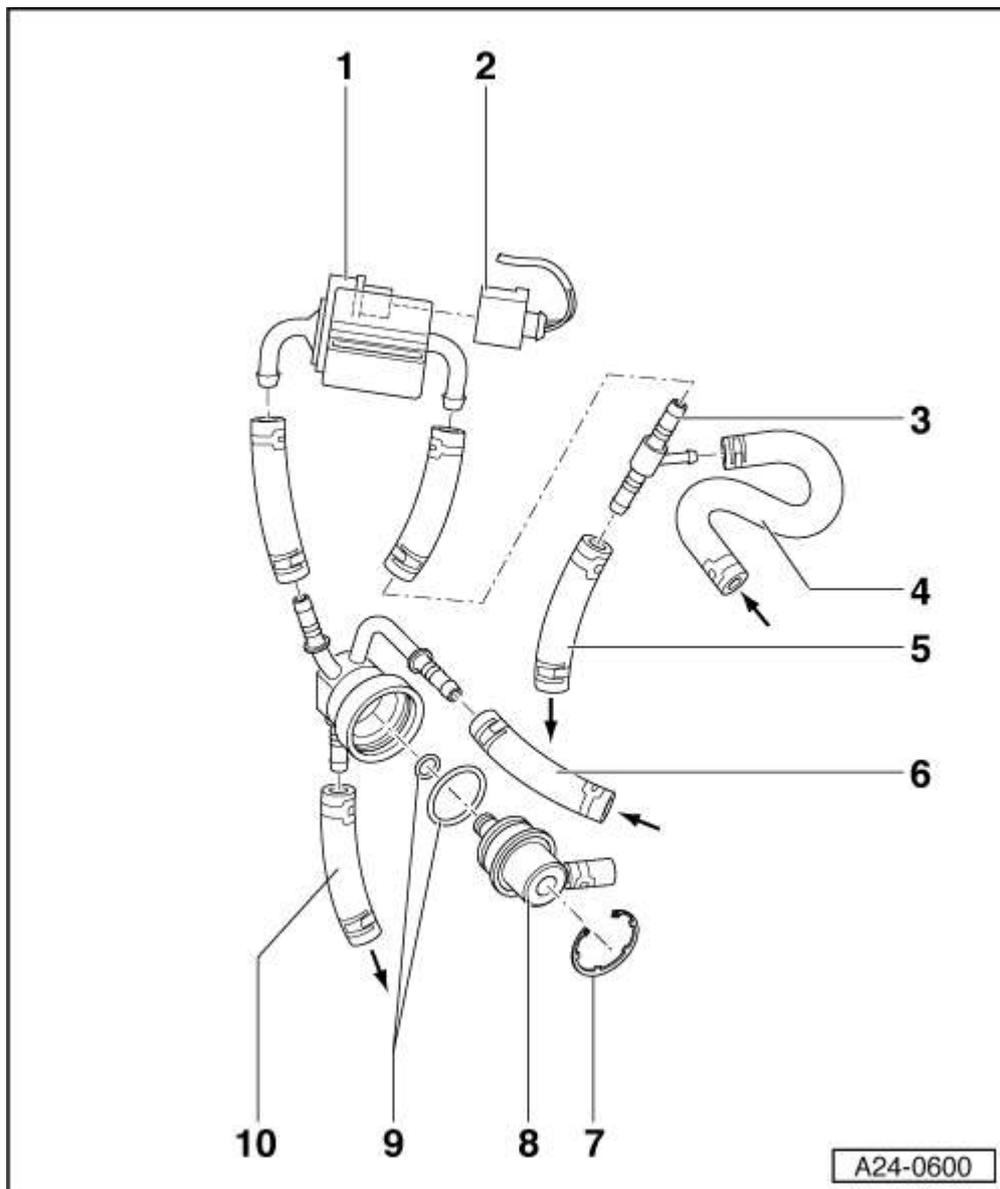

- ❑ Secure with spring-type clips
- ❑ Check that it is securely seated