


Checking tensioning roller for main drive toothed belt

Procedure

- Detach bonnet → Chapter.
- Remove poly V-belt pulley for crankshaft → Chapter.
- Remove bolts -arrows- and loosen retaining clips -1- to detach toothed belt cover (bottom).

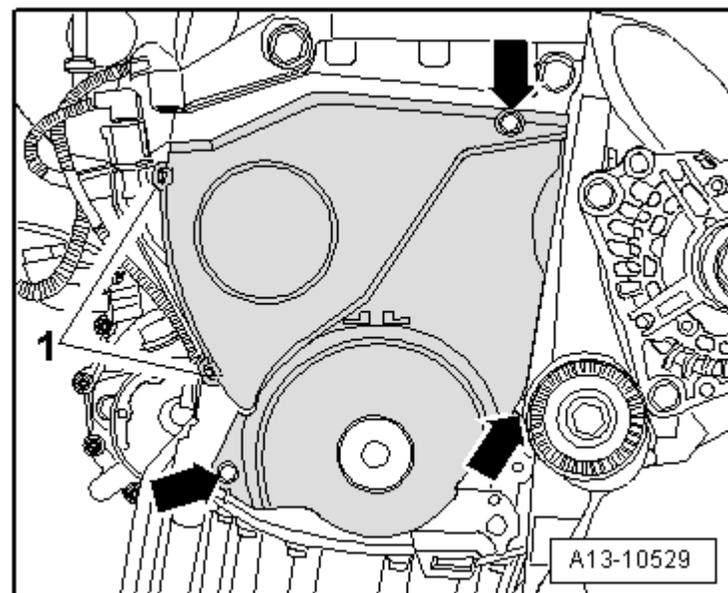

- Note position of indicator -left arrow- on tensioning roller and push in toothed belt with firm thumb pressure -right arrow-.
- The indicator must move to the side.
- Release tension on toothed belt.
- Turn crankshaft 2 rotations in direction of engine rotation.
- Check position of indicator on tensioning roller.
- The indicator must move back to its normal position.
- Renew the tensioning roller if the indicator does not return to its previous position.

Assembling

- Tightening torque → Chapter

Installation is carried out in the reverse order; note the following:

- Install poly V-belt pulley for crankshaft → Chapter.

