

2 Headlights

Observe notes on contact corrosion ⇒ [page 77](#) .



Note

If any work is performed which could affect the headlight setting, the headlights must be re-adjusted ⇒ Maintenance ; Booklet 809 .

2.1 Headlights - exploded view

1 - Surround

2 - Lens

- ☐ Can be replaced separately up to Model Year 2001

3 - Clip

- ☐ Can be replaced separately up to Model Year 2001

4 - Gasket

- ☐ Can be replaced separately up to Model Year 2001

5 - 6 Nm

6 - Headlight housing

- ☐ with reflector
- ☐ Can be replaced separately up to Model Year 2001

7 - Bulb holder

- ☐ for turn signal bulb

8 - Turn signal bulb

- ☐ 12 V, 21 W
- ☐ Orange
- ☐ Bulb replacement ⇒ [page 84](#)

9 - 6 Nm

10 - Dipped beam bulb

- ☐ H7 - 12 V, 55 W
- ☐ Bulb replacement ⇒ [page 82](#)

11 - Main beam bulb

- ☐ H1 - 12 V, 55 W
- ☐ Bulb replacement ⇒ [page 83](#)

12 - Housing cover

- ☐ with seal

13 - Parking light bulb

- ☐ W5W - 12 V, 5 W
- ☐ Bulb replacement ⇒ [page 84](#)

