

Servicing shift mechanism

Removing and installing gear stick knob and cover

1. Gear stick knob

- ☐ Detach and fit together with cover

- ☐ Removing => Fig.3

2. Cover with frame

- ☐ Remove and install together with gear stick knob and cover ring=>Page 3

- ☐ Detaching and attaching from/to gear stick knob=> Fig.5

3. Cover ring


- ☐ Removing and installing => Fig.4

4. Connection piece

- ☐ Connects cover to gear stick knob
- ☐ Removing => Fig.5


5. Clamp

- ☐ For securing gear stick knob on gear stick

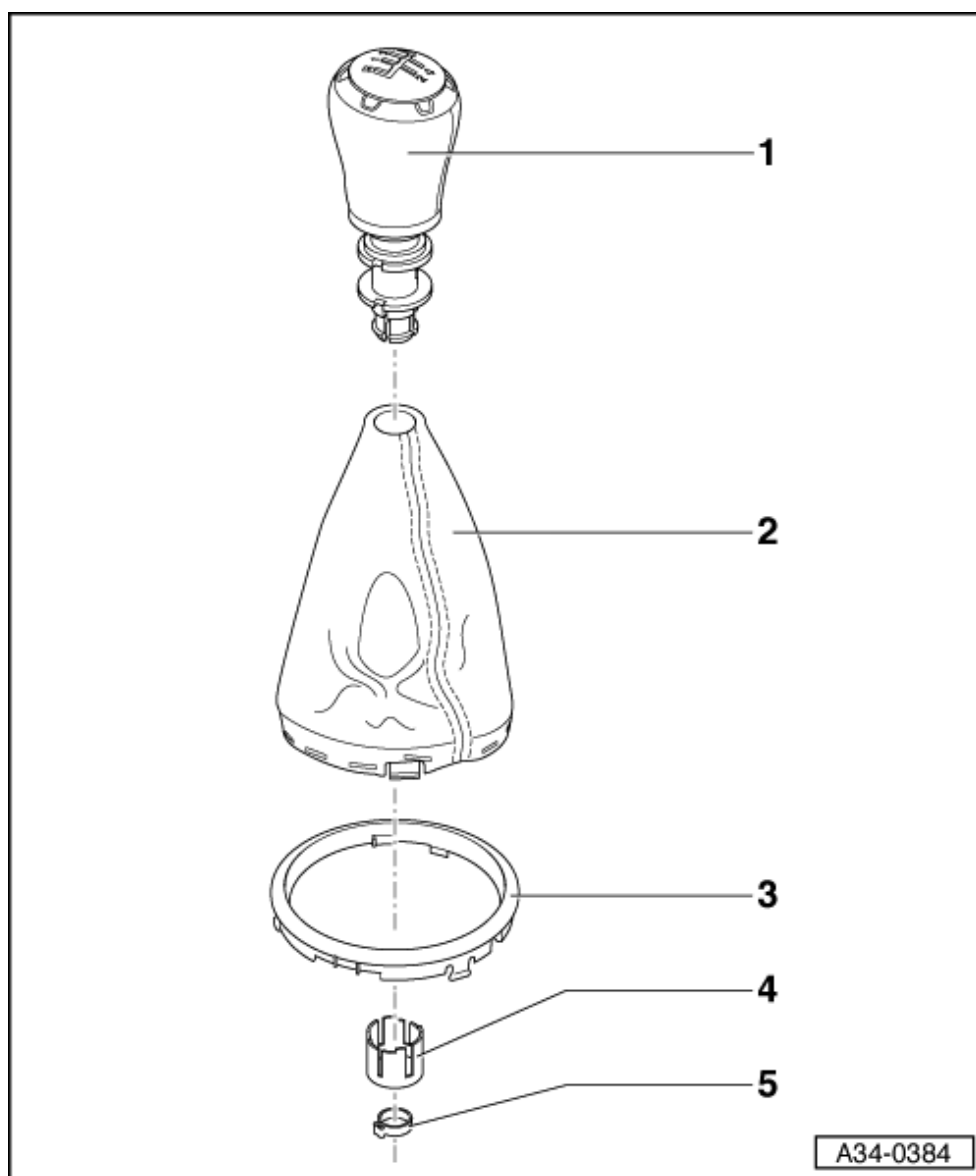

→ Fig.3 Removing gear stick knob and cover for gear stick


- Lift cover for gear stick -1- off centre console in direction of arrow.
- Pull cover up and over gear stick knob.

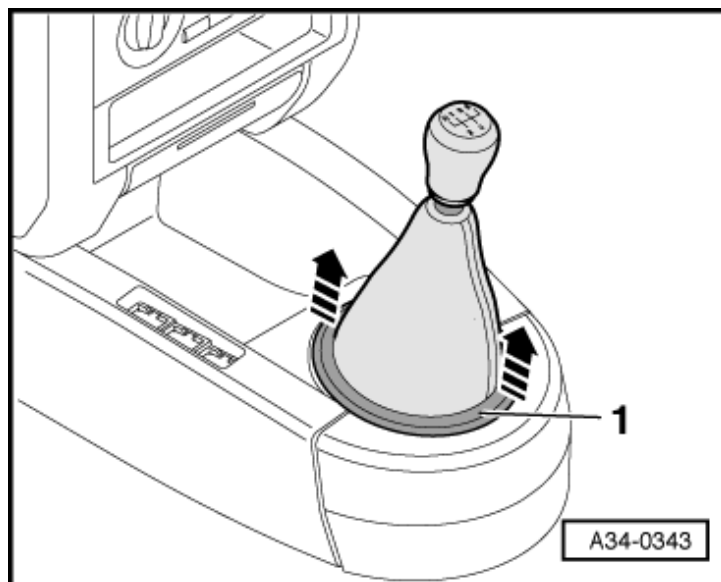

- Cut through clamp -arrow- and pull off gear stick knob together with cover.

Assemble in reverse order, paying attention to the following:

- Replace clamp -arrow-.

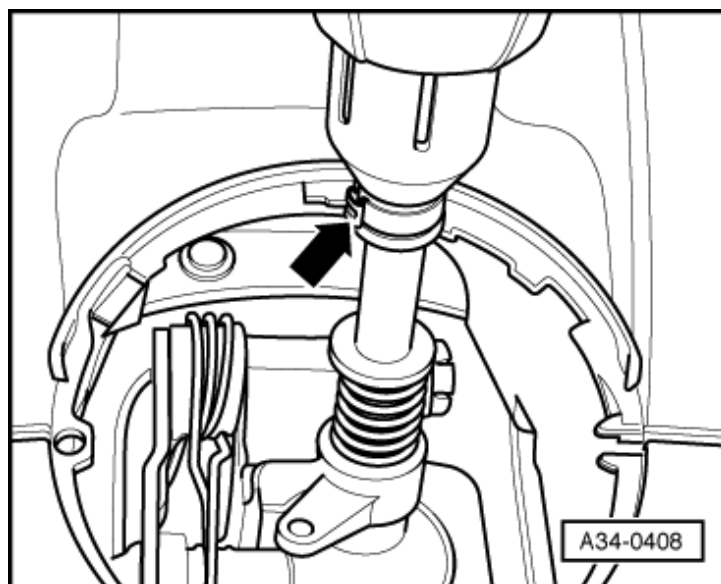


→ **Fig.4 Detaching and assembling cover ring and gear stick cover**

- Release retainer tabs -arrows A and B- and pull cover ring -1- upwards off inner ring -2-.

Assemble in reverse order, paying attention to the following:

- Insert wide retainer tab of inner ring - arrow A- into recess in cover ring -1-.

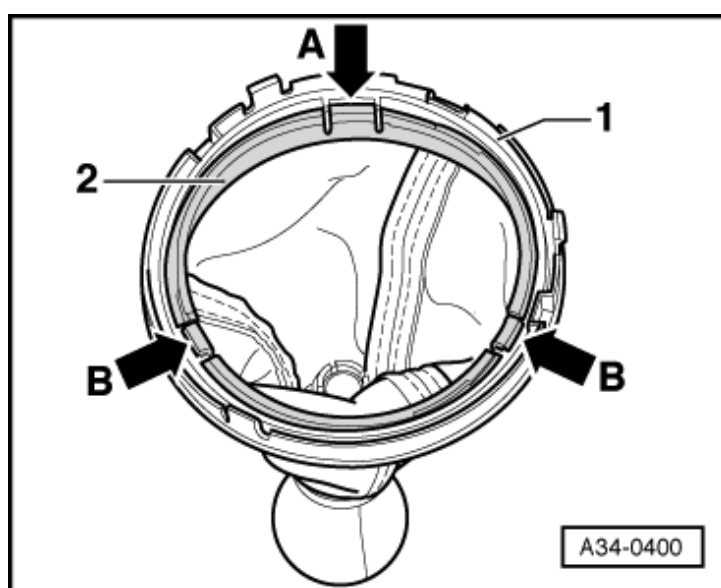

→ **Fig.5 Separating cover from gear stick knob and attaching to gear stick knob**

- Turn cover inside out.
- Use screwdriver to prise tabs on connection piece -arrows- outwards.
- Pull connection piece off gear stick.
- Turn gear stick knob outwards and pull off cover.

Assemble in reverse order, paying attention to the following:

- Turn cover inside out.
- Insert gear stick knob into cover.
- Slip connection piece over gear stick knob and cover. Connection piece must engage on gear stick knob.

