



Audi A2

Quick reference guide



Dear Audi Driver,

The aim of this quick reference guide is to introduce you to the main features and controls of your vehicle.

This quick reference guide cannot replace the information contained in the Owner's Manual; it is therefore important that you also read the notes and warnings in the Owner's Manual.

We wish you safe and enjoyable motoring with your new Audi.
AUDI AG



Locking and unlocking the vehicle

The central locking system locks and unlocks all the doors, the boot lid and the tank flap. It can be operated with the remote control or by turning the key in the lock.

Operating the radio-activated remote control
Press the appropriate button for about 1 second.

1 Unlocking button

Open one of the doors or the boot lid within about 60 seconds, otherwise the vehicle will lock itself again automatically.

2 Unlocking button for tailgate
Press the button for at least 1 second.

 
3 Locking button

The turn signals flash once to confirm that the tailgate is properly closed.

4 Folding out the master key
Press the release button.

Folding away the master key
Press the button and fold the key away.

Note: Press and hold unlocking button of remote control to open all electric windows. Press and hold locking button of remote control to close all electric windows.

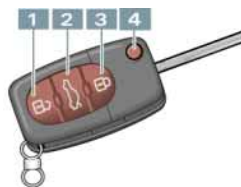

Warning: The doors and windows cannot be opened from inside the vehicle if it has been locked from the outside.

Anti-theft alarm

The alarm system is automatically **set** when the car is locked. The alarm system is **switched off** automatically when you unlock the vehicle with the remote control.

Note: If you unlock the vehicle by inserting the key in the driver's door, the ignition must be switched on within 15 seconds, otherwise the alarm will be triggered.

Safety

Seat belts must be worn on every journey, even on short trips in town. This applies to the front **and** rear seats. To ensure that the seat belts, belt tensioners and airbags are fully effective, note the following points:

Adjust seat and sit in correct position

The front seats should not be positioned too close to the steering wheel or dashboard. Maintain a distance of at least 25 cm from the steering wheel. It is important to sit in a normal, upright position and set the backrest so it is fully against your back. The top of the head restraint should be at eye level (or higher). Put your feet in a comfortable position in the footwell.



Wear the seat belt correctly

Make sure that the shoulder section of the belt is positioned over the centre of the shoulder, and move the lap section as far down over the hips as possible. The belts should always be worn so that they fit tightly (see illustration).

Safety of children in the vehicle



Category 0



Category 1



Category 2

Children under 12 should travel on the rear seat. They must be protected by a child restraint system which complies with the European standard ECE R 44 and is suitable for the child's weight and height. The safest place for the child restraint system is behind the front passenger's seat. Make sure that the system is properly secured. The retractor mechanism of the seat belts can be locked to secure a child safety seat.

Please observe the notes in the Audi Owner's Manual and refer to the manufacturer's instructions for the child seat.

Category 0 or 0+: For babies up to about 9 months/10 kg and infants up to about 18 months/13 kg.

Category 1: For small children up to about 4 years of age/18 kg.

Category 2: For children up to about 7 years/25 kg.

Category 3: Children over 7 years of age but less than 1.5 metres tall are best protected by a booster cushion in conjunction with the three-point seat belt.

© 2002 AUDI AG

AUDI AG reserves the right to alter any part of the vehicle, its equipment and technical specifications. No legal commitment can be implied by the information, illustrations or descriptions in this publication. No part of this publication may be reprinted, reproduced or translated without the written permission of AUDI AG. All rights under the laws of copyright are expressly reserved by AUDI AG. Subject to change. Printed in Germany. Concept and layout: Priemer Kataloge GmbH.

Adjusting front seats

1 Angle of backrest
Lean forwards and turn adjuster wheel.

2 Seat backwards or forwards
Lift the handle and move the seat.

 
3 Seat height
The seat height is adjusted by pulling or pushing the lever.

Adjusting belt height

Move the top belt guide up or down as required. Tug the belt to check that the catch is engaged properly.



Rear seats

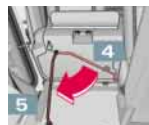

The luggage area can be extended when extra space is required; there are several alternatives:

Changing angle of rear backrest
Pull up the handle 1 and push the backrest forwards until the handle 1 clicks back into place.

Folding down rear backrests
Pull up the handle 1 and fold down the backrest.

Folding down rear seat
Open the rear doors. Pull up the handle 1 and fold down the backrest. Press the top of the backrest 2 down firmly in the direction indicated (arrow). Pull the release handle 3 and tip the seat forwards.

Pull out the rod 4 located under the seat and insert in the retainer 5.



Removing rear seats

Open the rear doors. Pull up the handle 1 and fold down the backrest. Press the top of the backrest 2 down firmly in the direction indicated (arrow). Pull the release handle 3 in the direction indicated (arrow) and lift up the seat 6. Now push the seat towards the rear and lift it out of the car.

Installing rear seats

Engage the retainers on the seat 7 in the front mountings 8.

Then press the seat into the rear mountings 9 so that it engages securely.

Setting up rear seats and backrests
Fold back the seat and backrest until they engage securely. Make sure that the outer rear seat belts are located in the belt guides, so that they are not trapped in the backrest catch.

Instruments and warning/indicator lamps



1 Rev counter

2 Warning and indicator lamps

EPC Electronic power control (for engine)¹⁾ or

Glow plugs (on diesel models)¹⁾

ECO Economy mode or

Trailer turn signals

Side lights/headlights

Traction control system (ASR) or Electronic stability program (ESP)

Electronic immobilizer

Main beam headlights

Turn signals, hazard warning lights

Fault in engine management system¹⁾

AIR BAG Airbag system¹⁾

Anti-lock brake system¹⁾

Handbrake engaged

Alternator¹⁾

Seat belt reminder

3 Coolant temperature gauge

4 Fuel gauge

5 Speedometer

6 Clock/Date

7 Control button:

To check distance to next service

Press the button briefly with the ignition on and the vehicle stationary.

To check the auto-check control display

Press the button twice with the ignition on.

To call up driver information
Press the button if one of the red symbols flashes.

To activate mileage recorder display and clock

Press the button when the ignition is off.

To set speed warning
Press the button briefly when the desired speed is indicated on the speedometer. To clear the speed limit, press the button for at least 1 second.

To set the time/date
Keep pulling the button briefly until the desired display appears. Turn the button to alter the time/date.

8 Display:

Warning symbols and auto-check control

OK No faults detected

Fault in brake system

Coolant temperature too high/coolant level too low

Engine oil pressure too low

If one of the red symbols lights up while you are driving, stop the car, switch off the engine and refer to the Owner's Manual.

Brake light faulty¹⁾

Bulb failure: dipped headlights or rear lights¹⁾

Brake pads worn¹⁾

Washer fluid level low

Fault in power steering

Fuel level low

Battery voltage too high or too low¹⁾

Check engine oil level

Engine oil sensor faulty¹⁾

Speed warning 1 or 2 (km/h or mph)

Door or tailgate not shut

On-board computer

Instantaneous fuel consumption

Fuel range

Driving time

Average fuel consumption

Average speed

Outside temperature

Radio/telephone information

Navigation/telematics information

Selector lever positions on vehicles with automated manual gearbox

Service indicator
Shortly before a service is due, the display will briefly show the word **Service**, together with the number of miles/km until the service is due.

9 Reset button for trip recorder

10 Mileage recorder

Top display: trip recorder

Bottom display: total mileage

¹⁾ If one of these warning symbols lights up while you are driving, please take the vehicle to an Audi workshop straightaway.

Filling the tank



 
Releasing the tank flap

Press the switch (with the filler pump symbol) on the driver's door pillar to release the fuel filler flap. Then unscrew the tank cap and hook it onto the flap.

Stickers for:

1 Fuel grade

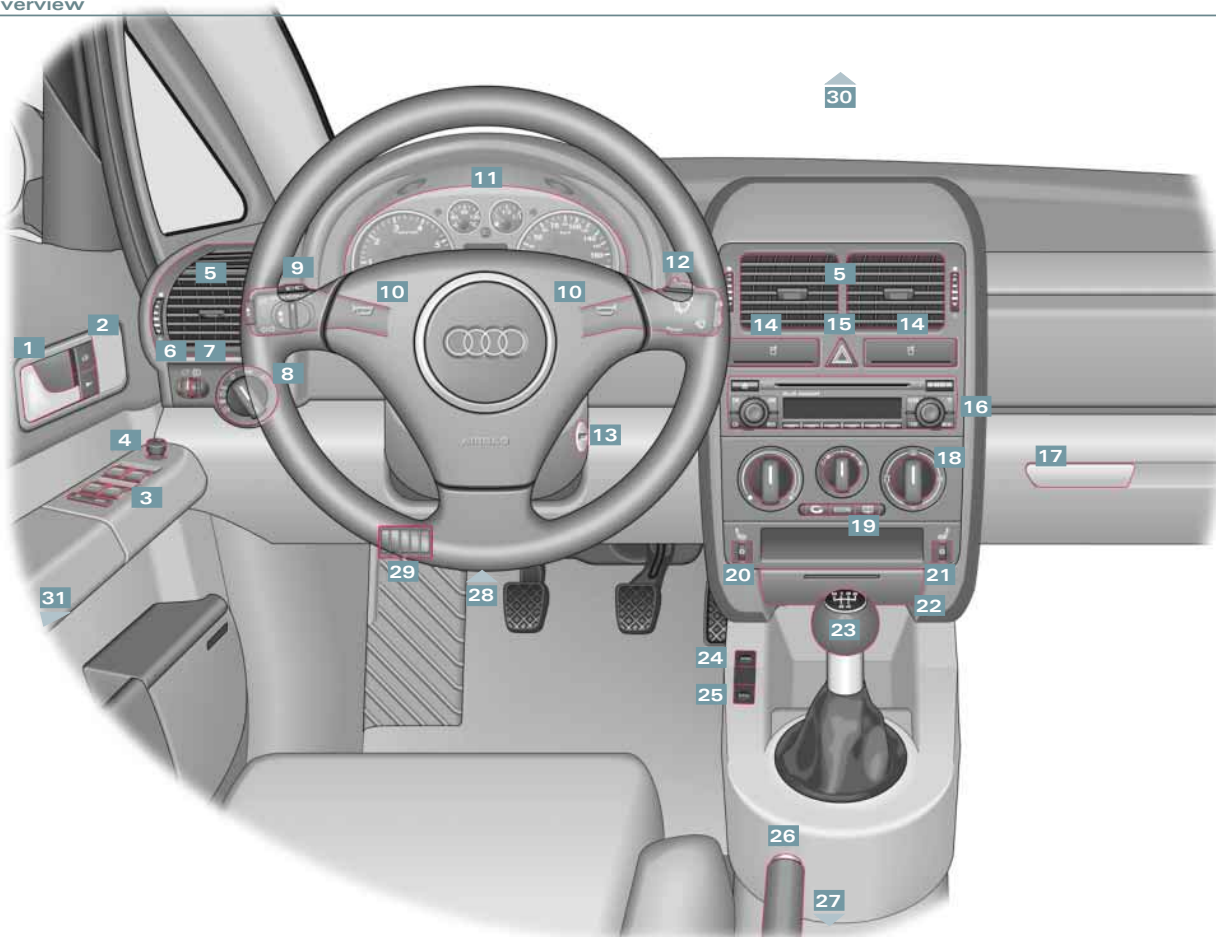

2 Tyre pressures



1 Door handle

2 Central locking switch

Press the appropriate symbol to lock or unlock the vehicle centrally from the inside:

-  unlock
-  lock


 
 
3 Electric windows

Press or lift the switch as far as the **first stop** and hold it until the window has moved to the desired position.

"One-touch" function:
Press or lift the switch as far as the **second stop**; the window will automatically open or close all the way.

Note: You can use the safety switch to disable the window switches in the rear doors.

4 Electric adjuster for exterior mirrors

-  Left exterior mirror
-  Off
-  Right exterior mirror

Press the knob in the appropriate direction to move the mirror surface. The mirrors are heated automatically at low outside temperatures when the ignition is on.

5 Air outlets with thumbwheels

6 Thumbwheel for instrument lighting

7 Thumbwheel for headlight range control

8 Light switch

- Lights off
- ☞ Side lights
- ☞ Main or dipped beam headlights

To switch on fog lights, turn switch to dipped beam position, then pull out to

1st stop:

- ☞ Front fog lights

2nd stop:

- ☞ Front fog lights and
- ☞ Rear fog light

9 Turn signals and headlight dip lever



1 Right turn signals

(With ignition off: right parking light on)

2 Left turn signals

(With ignition off: left parking light on)

3 Main beam headlights

4 Headlight flasher

Cruise control system

To activate the system: slide control A to ON/EIN position. Press button B to store the current speed and maintain this speed constantly.

To switch off cruise control temporarily:

press either the brake pedal or clutch pedal, or slide control A to OFF/AUS. To resume the programmed cruising speed, slide switch A to RES/AUFN.

To switch off cruise control completely:

 
slide control A all the way over to OFF/AUS until the click stop engages.

10 Horn

11 Instruments and warning/indicator lamps

See also overleaf.

12 Windscreen wiper and washer lever

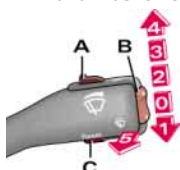

0 Off

1 Brief wipe

2 Intermittent wipe

The wiper intervals can be varied in stages by turning the control A.

3 Slow wiper speed

4 Fast wiper speed

5 Automatic wash and wipe

Pull lever towards you and hold.

Function selector switch for on-board computer

Press the top or bottom of rocker switch B to show the various displays in turn. Press and hold button C to reset display to zero.

Function selector for display modes

Press button C repeatedly to select the following displays: on-board computer, navigation system and telematics, or to switch the display off.

Function selector for display modes

Press button C repeatedly to select the following displays: on-board computer, navigation system and telematics, or to switch the display off.

Function selector for display modes

Press button C repeatedly to select the following displays: on-board computer, navigation system and telematics, or to switch the display off.

Function selector for display modes

Press button C repeatedly to select the following displays: on-board computer, navigation system and telematics, or to switch the display off.

Function selector for display modes

Press button C repeatedly to select the following displays: on-board computer, navigation system and telematics, or to switch the display off.

Function selector for display modes

Press button C repeatedly to select the following displays: on-board computer, navigation system and telematics, or to switch the display off.

Function selector for display modes

Press button C repeatedly to select the following displays: on-board computer, navigation system and telematics, or to switch the display off.

Function selector for display modes

Press button C repeatedly to select the following displays: on-board computer, navigation system and telematics, or to switch the display off.

Function selector for display modes

Press button C repeatedly to select the following displays: on-board computer, navigation system and telematics, or to switch the display off.

Function selector for display modes

Press button C repeatedly to select the following displays: on-board computer, navigation system and telematics, or to switch the display off.

Function selector for display modes

Press button C repeatedly to select the following displays: on-board computer, navigation system and telematics, or to switch the display off.

Function selector for display modes

Press button C repeatedly to select the following displays: on-board computer, navigation system and telematics, or to switch the display off.

Function selector for display modes

Press button C repeatedly to select the following displays: on-board computer, navigation system and telematics, or to switch the display off.

Function selector for display modes

Press button C repeatedly to select the following displays: on-board computer, navigation system and telematics, or to switch the display off.

Function selector for display modes

Press button C repeatedly to select the following displays: on-board computer, navigation system and telematics, or to switch the display off.

Function selector for display modes

Press button C repeatedly to select the following displays: on-board computer, navigation system and telematics, or to switch the display off.

Function selector for display modes

Press button C repeatedly to select the following displays: on-board computer, navigation system and telematics, or to switch the display off.

Function selector for display modes

Press button C repeatedly to select the following displays: on-board computer, navigation system and telematics, or to switch the display off.

Function selector for display modes

Press button C repeatedly to select the following displays: on-board computer, navigation system and telematics, or to switch the display off.

Function selector for display modes

Press button C repeatedly to select the following displays: on-board computer, navigation system and telematics, or to switch the display off.

Function selector for display modes

Press button C repeatedly to select the following displays: on-board computer, navigation system and telematics, or to switch the display off.

Function selector for display modes

Press button C repeatedly to select the following displays: on-board computer, navigation system and telematics, or to switch the display off.

Function selector for display modes

Press button C repeatedly to select the following displays: on-board computer, navigation system and telematics, or to switch the display off.

Function selector for display modes

Press button C repeatedly to select the following displays: on-board computer, navigation system and telematics, or to switch the display off.

Function selector for display modes

15 Switch for hazard warning lights

16 Radio or Navigation System

17 Storage compartment

18 Heating and ventilation/air conditioner

19 Switch for rear window heater

20 Thumbwheel for seat heating (front left seat)

21 Thumbwheel for seat heating (front right seat)

22 Ashtray or Storage compartment

23 Gear lever/selector lever

Selector lever positions on vehicles with automated manual gearbox

STOP - Parking lock

R - Reverse gear

N - Neutral

D - Drive

Notes:

- To move the selector lever out of position **STOP** or **N**, press the interlock button on the selector lever handle and the brake pedal simultaneously.
- Do not move the selector lever to positions **STOP** or **R** when the vehicle is moving.
- For maximum acceleration in the gears, press the accelerator pedal right down beyond the point of resistance to activate the kick-down.

Manual gear selection (Tiptronic)

The Tiptronic program enables you to change gear manually. Move the selector lever to the left out of position **D** into the centre of the shift gate. Press the selector lever forwards briefly to shift up a gear, or push the lever back to shift down a gear.

Notes on driving with automated manual gearbox

Starting the engine and moving off

- Make sure the selector lever is at **STOP** or **N**.
- **Press the foot-brake** while starting the engine.
- Press the interlock button and move the selector lever to **D**.
- To move off, release the foot-brake and press the accelerator.

Stopping

- Always press the foot-brake when you stop the vehicle with the engine running, otherwise the vehicle could start moving slowly (even if the engine is only running at idling speed).
- Always use the handbrake in addition to the foot-brake if you have to stop on a gradient.

Note: In the ECO mode, the engine switches itself off if the foot-brake is pressed and held with the vehicle stationary. The engine automatically starts again and the car will start moving when you take your foot off the brake pedal.

Parking

- **Press the foot-brake** and hold it down. Apply the handbrake firmly.
- Press the interlock button and move the selector lever to **STOP**: the engine will switch itself off. If the handbrake has not been applied, a warning chime will sound.

Note: The ignition key can only be removed with the selector lever in the **STOP** position. The selector lever is automatically locked when you remove the key.

24 Switch for ASR (traction control system)

25 Button for Economy mode (automated manual gearbox)

You can switch the Economy mode on and off with the ECO button when the selector lever is in position **D**. You can use the Economy mode whenever you wish to achieve particularly low fuel consumption. The following factors contribute:

Timing of gearshifts

Gearshifts are timed for improved fuel efficiency

START-STOP function

The engine switches itself off after a few seconds if you stop the vehicle and leave your foot on the foot-brake. The engine starts again and the vehicle will start moving as soon as you release the foot-brake. The engine will not switch itself off if it is still cold, or if too many items of electrical equipment are in use.

Reduced engine power

Engine power is reduced to 30 kW (except when using the kick-down feature).

Freewheel feature (reduced engine braking)

 
The clutch is disengaged automatically when you take your foot off the accelerator while the vehicle is moving. This means the engine braking effect is minimal. The clutch will engage again when you press the foot-brake, so the normal engine braking effect is then available.

26 Handbrake

27 Storage compartment/navigation system and Telematics system

Refer to operating instructions.

28 Lever for adjustable steering column

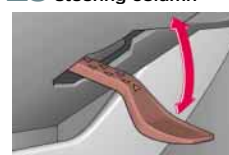

Pull lever down and adjust the position of the steering column as required. Then push the lever back up as far as it will go.

29 Release lever for service flap

Please refer to Owner's Manual.

30 Switches above the interior mirror



"Open sky" sun roof

 
To open: Press and hold the switch A until the roof has reached the desired position. The ignition must be switched on.

To close: Press the switch A again.

SOS and service call

Please refer to the Telematics operating instructions for further information on using these buttons B.

31 Switch in door pillar (driver's side)



This switch deactivates the interior monitor for the antitheft alarm system.



Releasing the tank flap