

Engine

Overview of system

Intake manifold pressure sender G71 with Intake air temperature sender G42

Engine speed sender G28 Versions I and II

Hall sender G40

Knock sensor I G61

Lambda probe upstream of catalytic converter G39 with Heater for lambda probe Z19
Lambda probe downstream of catalytic converter G130 with Heater for lambda probe Z29

Coolant temperature sender G2/G62

Throttle valve control part J338 with Throttle valve drive G186 (electric throttle operation)
Angle sender 1/2 for throttle valve drive G187/G188

 
Accelerator pedal module with accelerator pedal position sender G79/G185

Brake light switch F/F47


Auxiliary input signals

A/C compressor
Air conditioner (engine speed increase)
Tank fill level*, crash signal; CCS switch; DF signal; vehicle speed signal from combi-processor J218

Control unit for 4LV J537



Diagnostic connection

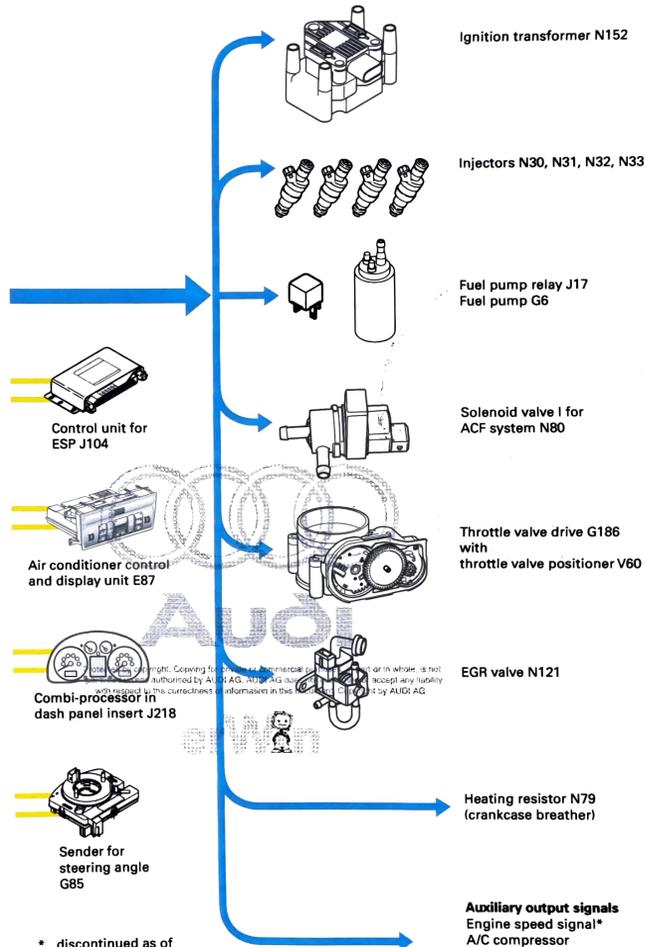

Control unit for ESP J104

Air conditioner control and display unit E87

Combi-processor in dash panel insert J218

Sender for steering angle G85

* discontinued as of CAN compatible combi-processor J218

SSP247_021