

Removing and installing the fresh-air blower - V2-

- Remove the glove box: → General Body Repairs, Interior, Repair group 68
- Unplug the connector -A-.
- Unfasten the cable ties -B-.
- Remove the bolts -C-.
- Pull the fresh-air blower -D- out of the heater.



Note

- ◆ To permit access to the bolts -C-, an aperture is provided in the dash panel cross member -A-.
- ◆ Installation is in reverse order.
- ◆ During installation, take care to ensure that the fresh-air blower -V2- is correctly seated in the heater / air conditioner.
- ◆ Remember that there are different fresh-air blower -V2- versions for vehicles with heating and air conditioning. → Parts List

