


Audi A2

Current Flow Diagram

No. 1 / 15

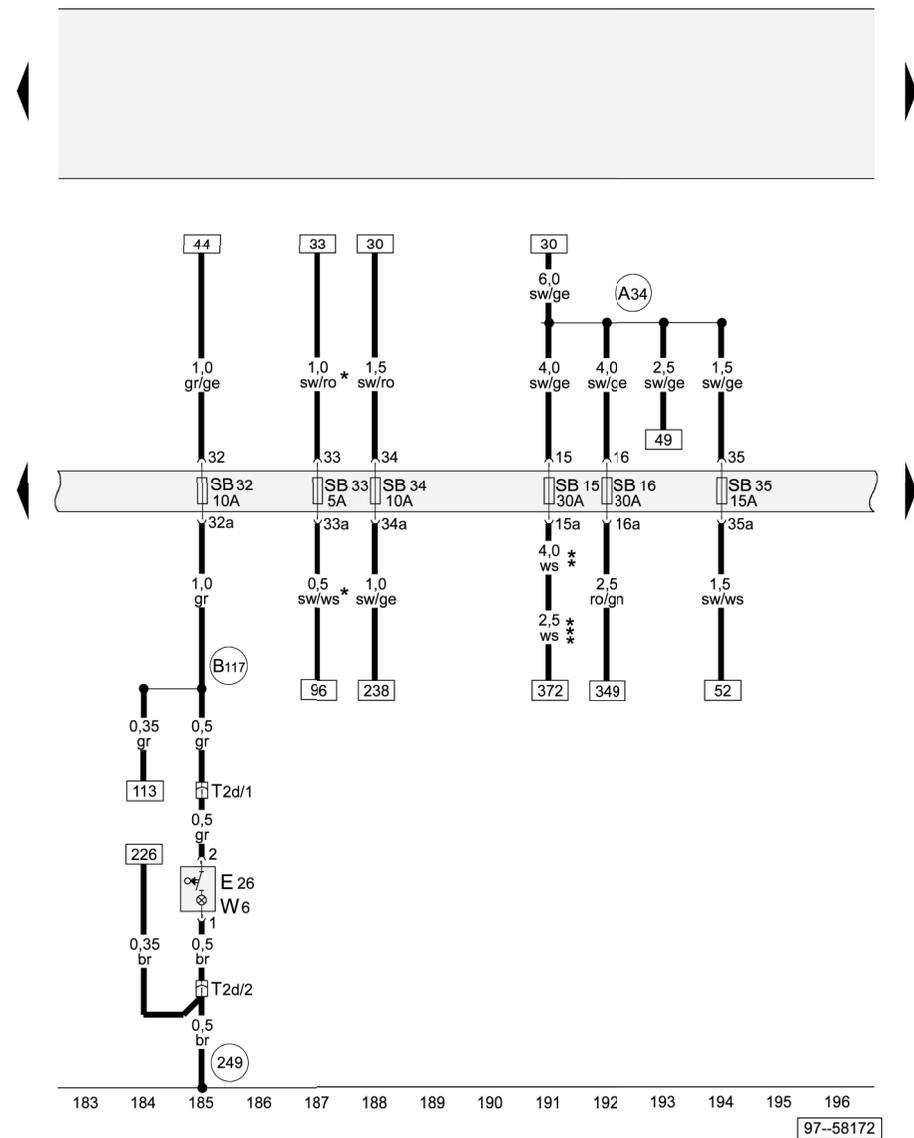

Fuses on fuse box, glove box light

- E26 - Glove box light switch
- SB15 - Fuse -15- on fuse box
- SB16 - Fuse -16- on fuse box
- SB32 - Fuse -32- on fuse box
- SB33 - Fuse -33- on fuse box
- SB34 - Fuse -34- on fuse box
- SB35 - Fuse -35- on fuse box
- T2d - 2-pin connector, black, near glove box
- W6 - Glove box light
- 249 - Earth connection -2-, in interior wiring harness
- A34 - Connection (75x), in dash panel wiring harness
- B117 - Connection (58a, right), in interior wiring harness
- * - Only applies to models with heater element for washer jet
- ** - As of model year 2003 no longer fitted (phased-in modification)
- *** - Phased-in modification

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink