


## Audi A2

## Current Flow Diagram

No. 1 / 8

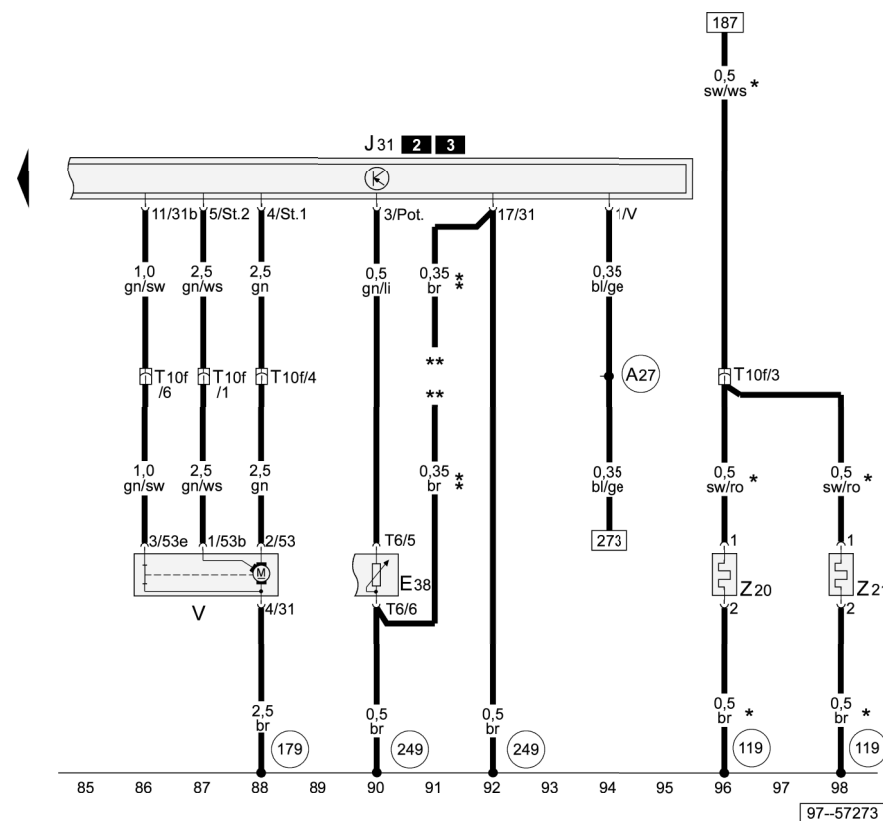

## Intermittent wiper control, automatic intermittent wash/wipe relay, heater element for washer jet

- E38 - Intermittent wiper control
- J31 - Automatic intermittent wash/wipe relay
- T6 - 6-pin connector, brown, behind steering column switch trim
- T10f - 10-pin connector, blue, connector point, A pillar, left
- V - Windscreen wiper motor
- Z20 - Heater element, left washer jet
- Z21 - Heater element, right washer jet
- 119 - Earth connection -1-, in headlight wiring harness
- 179 - Earth connection, in left headlight wiring harness
- 249 - Earth connection -2-, in interior wiring harness
- A27 - Connection (speed signal), in dash panel wiring harness

- \* - Only applies to models with heater element for washer jet
- \*\* - See applicable Current Flow Diagram: ABS

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = purple  
 ge = yellow  
 or = orange  
 rs = pink