

## Removing and installing rear bumper - exploded view

### 1 - Guide moulding

### 2 - Bolt

- 2 Nm

### 3 - Self-tapping screw

- 1.5 Nm

### 4 - Reinforcement moulding

- Before removing, detach bumper cover → **Item**.
- Fully unscrew bolts → **Item** and detach moulding.

### 5 - Plug-in nut

- Pressed into body.

### 6 - Self-tapping screw

### 7 - Bracket

- 1.5 Nm

### 8 - Hexagon bolt

- 23 Nm

### 9 - Bolt with washer

- 23 Nm

### 10 - Cross member

- Before removing, detach bumper cover → **Item**.
- Unscrew hexagon bolts and pull cross member out of bracket → **Item**.

### 11 - Trim cover


- Push trim cover in slightly on body flange and disengage at retainers.
- Pull trim cover out at left and right and detach.

### 12 - Self-tapping screw

- 2 Nm

### 13 - Cover

- Loosen rear section of wheel housing liner.
- Remove bolts → **Item** below wheel housing liners.

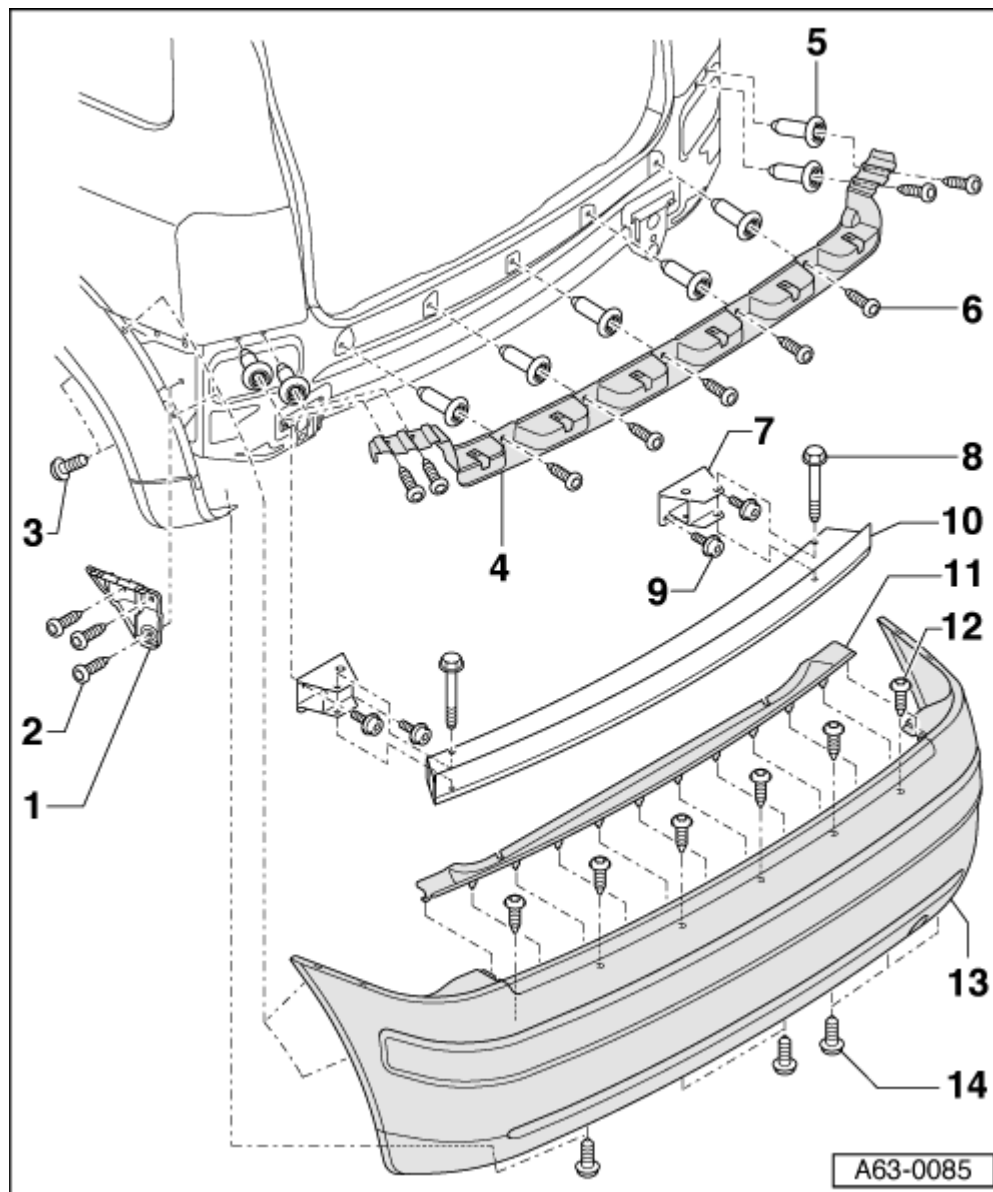

- ❑ Also remove bolts → **Item** at bottom.
- ❑ Disengage trim cover → **Item** from bumper cover.
- ❑ Detach sides of cover from guide mouldings → **Item** and detach cover from vehicle towards the rear.
- ❑ When installing, retainers on guide moulding must engage correctly in cover.

#### **14 - Self-tapping screw**

- ❑ 1.5 Nm