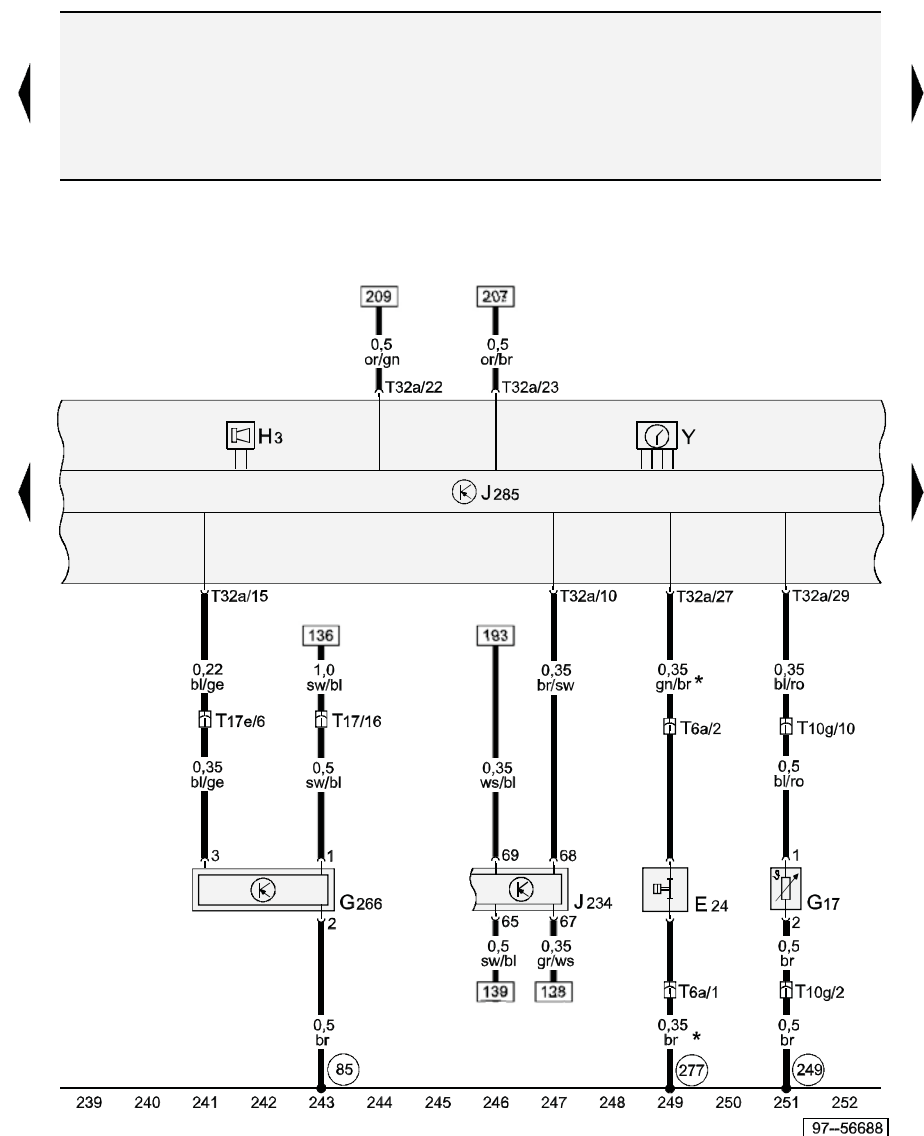


Audi A2

Current Flow Diagram

No. 1 / 19


Belt switch - driver's side, ambient temperature sensor, oil level/oil temperature sender, airbag control unit

- E24 - Belt switch, driver's side
- G17 - Ambient temperature sensor
- G266 - Oil level/oil temperature sender
- H3 - Buzzer/gong
- J234 - Airbag control unit
- J285 - Control unit with display in dash panel insert
- T6a - 6-pin connector, red, under driver's seat
- T10g - 10-pin connector, grey, connector point, A pillar, left
- T17 - 17-pin connector, brown, in footwell, front left
- T17e - 17-pin connector, blue, in footwell, front left
- T32a - 32-pin connector, green, on dash panel insert
- Y - Analogue clock
- 85 - Earth connection -1-, in engine compartment wiring harness
- 249 - Earth connection -2-, in interior wiring harness
- 277 - Earth connection -3-, in interior wiring harness
- * - Only applies to models with seat belt warning

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink