


## Suspension strut (basic running gear): exploded view

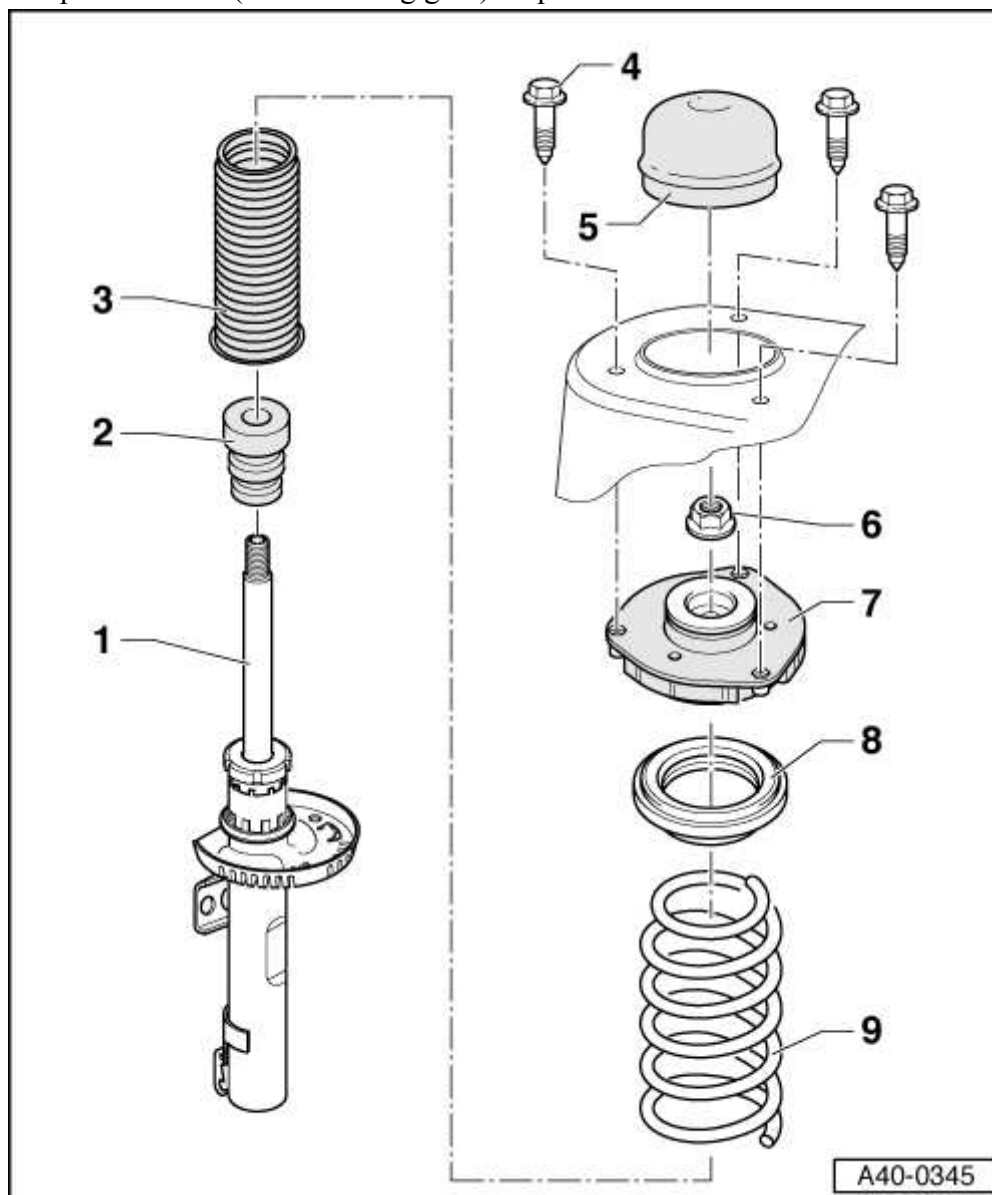

1 - Shock absorber

q Can be renewed individually

q For correct version refer to [→ Parts catalogue](#)

q Disposal [→ Chapter](#)

q Checking shock absorber for leaks and noises [→ Chapter](#)

2 - Bump stop

3 - Protective sleeve

4 - Hexagon bolt, 25 Nm

5 - Cap

q Always renew

6 - Hexagon nut, 60 Nm

q Loosening and tightening [→ Chapter](#)

7 - Suspension strut mounting

q Loosening and tightening [→ Chapter](#)

8 - Deep groove ball thrust bearing

9 - Coil spring

q Removing and installing → [Chapter](#)

q For correct version refer to → [Parts catalogue](#)

q Note colour code

q Surface of spring coil must not be damaged