


Protection by copyright. Copying for private commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. 0,5 JI AG does not warrant or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

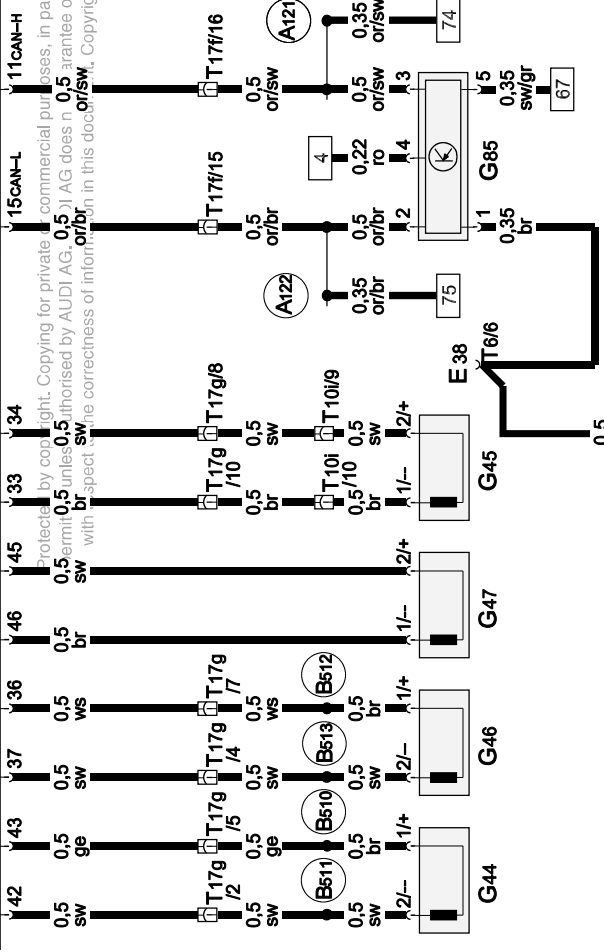

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

Rear right speed sensor, front right speed sensor, rear left speed sensor, front left speed sensor, steering angle sender

- E38 Intermittent wiper control
- G44 Rear right speed sensor
- G45 Front right speed sensor
- G46 Rear left speed sensor
- G47 Front left speed sensor
- G85 Steering angle sender
- J104 ABS with EDL control unit
- T6 6-pin connector, brown, behind steering column switch trim
- T10i 10-pin connector, black, connector point, A pillar, right
- T17f 17-pin connector, white, connector point, A pillar, left
- T17g 17-pin connector, red, connector point, A pillar, left
- 249 Earth connection -2-, in interior wiring harness
- A121 Connection (high bus), in dash panel wiring harness
- A122 Connection (low bus), in dash panel wiring harness
- B510 Connection -1- (rear right speed sensor), in interior wiring harness
- B511 Connection -2- (rear right speed sensor), in interior wiring harness
- B512 Connection -1- (rear left speed sensor), in interior wiring harness
- B513 Connection -2- (rear left speed sensor), in interior wiring harness