

Front left brake lining/pad wear sender, ABS with EDL control unit, control unit with display in dash panel insert

- G22 Speedometer sender (Hall sender, on gearbox)
- G34 Brake lining/pad wear sender, front left
- J104 ABS with EDL control unit
- J285 Control unit with display in dash panel insert
- K47 ABS warning lamp
- K86 Traction control system warning lamp
- T16 16-pin connector, diagnostic connector, black, near fuse box
- T17e 17-pin connector, blue, in footwell, front left
- T17f 17-pin connector, white, connector point, A pillar, left
- T17g 17-pin connector, red, connector point, A pillar, left
- T32 32-pin connector, blue, on dash panel insert
- T32a 32-pin connector, green, on dash panel insert

119 Earth connection -1-, in headlight wiring harness


249 Earth connection -2-, in interior wiring harness

A76 Connection (diagnosis wire K), in dash panel wiring harness

A132 Connection (TCS/ESP), in dash panel wiring harness

* Does not apply to models with engine code ANY

** Only applies to models with engine code ANY

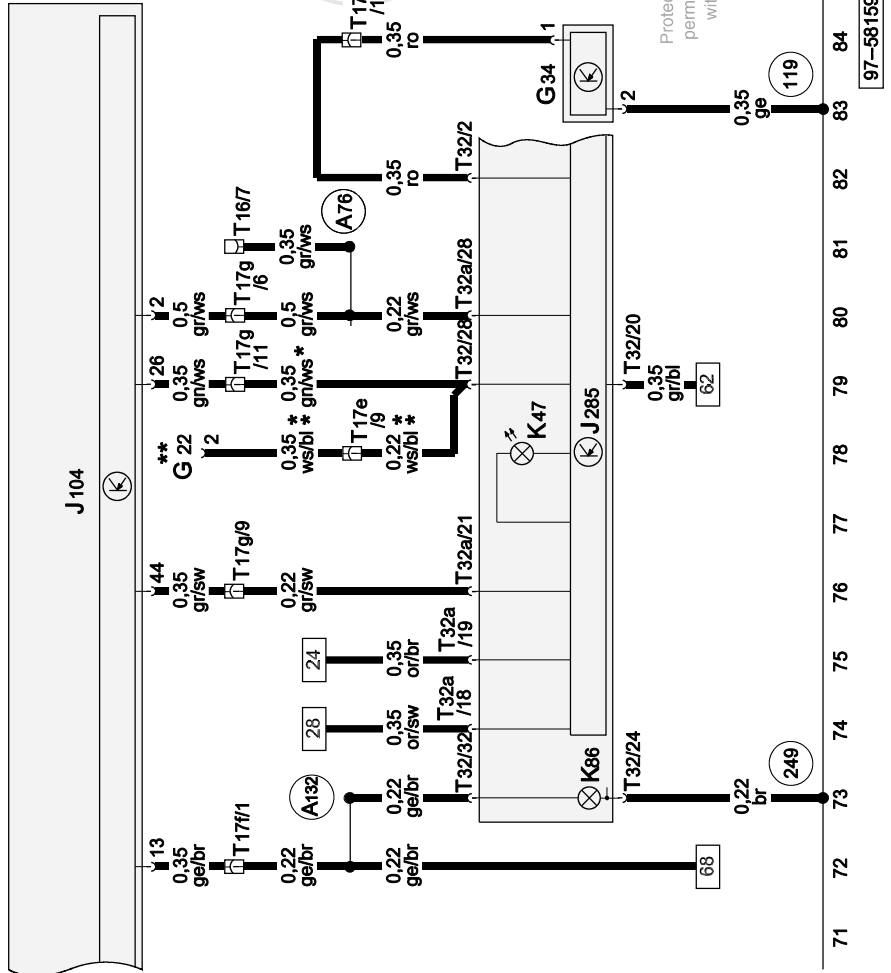

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted without express authorisation by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

sw = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 ll = purple
 ge = yellow
 or = orange
 rs = pink