


Audi A2

Current Flow Diagram

No. 1 / 7

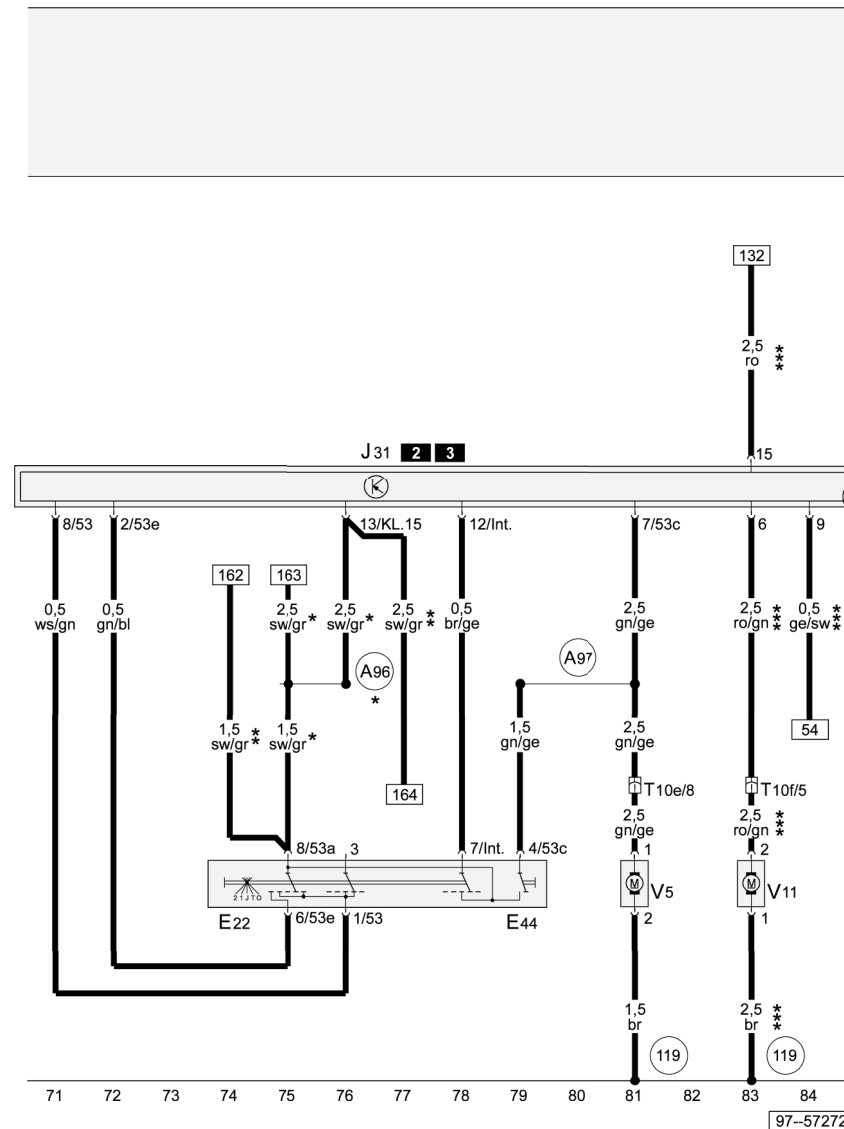

Intermittent wiper switch, windscreen washer pump switch, automatic intermittent wash/wipe relay

- E22 - Intermittent wiper switch
 - E44 - Windscreen washer pump switch (automatic wash/wipe and headlight washer system)
 - J31 - Automatic intermittent wash/wipe relay
 - T10e - 10-pin connector, brown, connector point, A pillar, left
 - T10f - 10-pin connector, blue, connector point, A pillar, left
 - V5 - Windscreen washer pump
 - V11 - Headlight washer system pump
 - 119 - Earth connection -1-, in headlight wiring harness
 - A96 - Connection (53a), in dash panel wiring harness
 - A97 - Connection (53), in dash panel wiring harness
- * - No longer fitted, phased-in modification
 ** - Phased-in modification
 *** - Only applies to models with headlight washer system

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

97-57272