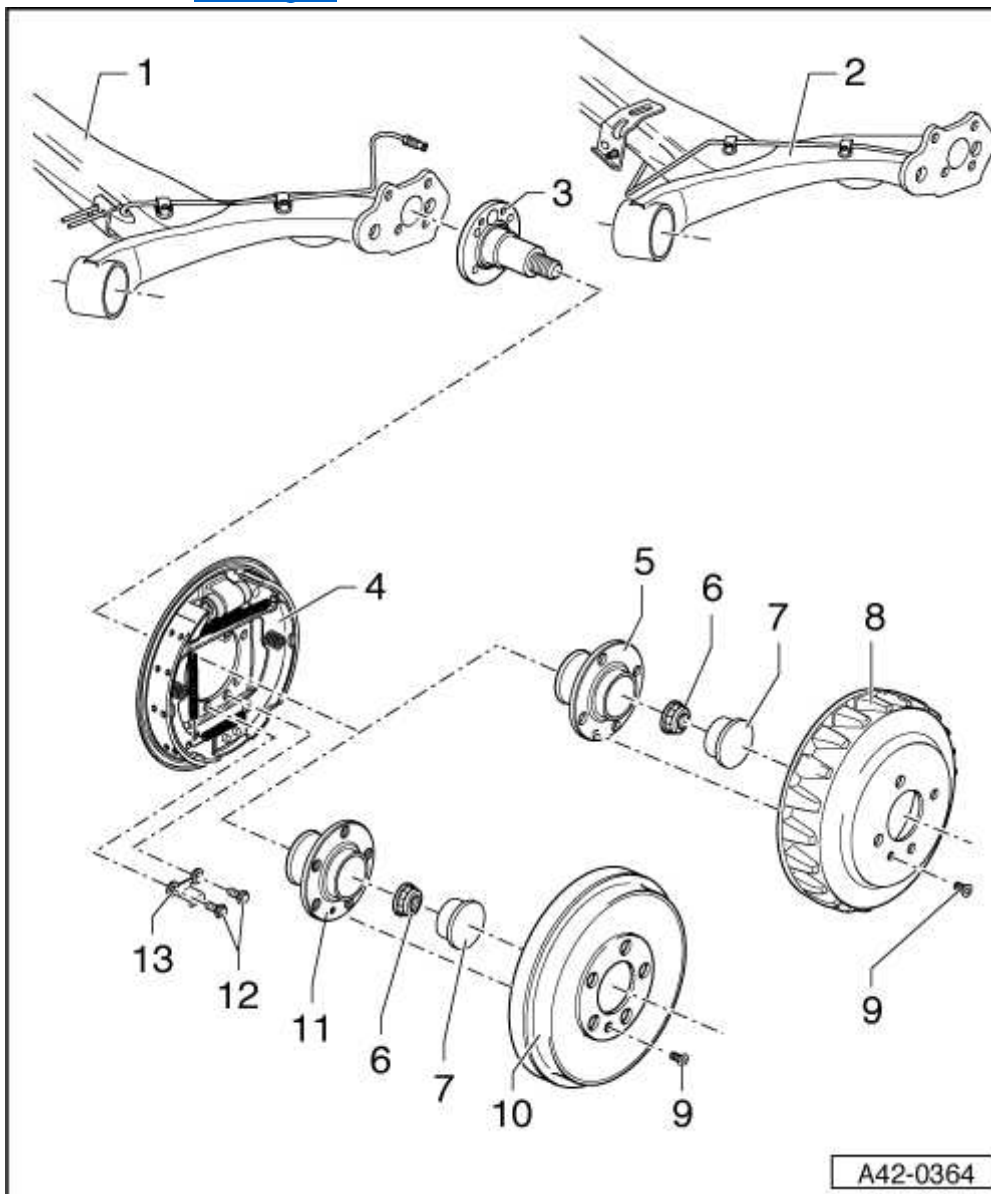


Wheel bearing (basic running gear and 1.2 TDI running gear): exploded view

General notes → [Chapter](#)

1 - Axle beam

q Up to week 13/02

q Keep contact surface and tapped holes for stub axle free from paint and dirt.

q For correct version refer to → [Parts catalogue](#)

2 - Axle beam

q From week 14/02 onwards

q Keep contact surface and tapped holes for stub axle free from paint and dirt.

q For correct version refer to → [Parts catalogue](#)

3 - Stub axle

q Must not be straightened

q Recutting the thread is not permitted

4 - Brake backplate with brake shoes

q Servicing → [Brake system; Rep. Gr.46](#)

5 - Wheel hub with wheel bearing

q For 1.2 TDI running gear

q The ABS sensor ring is incorporated in the wheel hub

q Removing and installing → [Chapter](#)

Wheel bearing and wheel hub are combined in one housing.

This wheel bearing/hub unit is maintenance-free and has zero play. There is no provision for adjustment or repair.

6 - 12-point nut (self-locking)

q Tightening torques:

q 1.2 TDI running gear: 175 Nm

q Basic running gear: 70 Nm and turn 30° further

q Always renew if removed

7 - Dust cap

q Always renew if removed

q Removing and installing (basic running gear) → [Chapter](#)

q Removing and installing (1.2 TDI running gear) → [Chapter](#)

Proper sealing can only be achieved by installing a new dust cap.

This is essential for optimum function and service life of wheel bearing.

8 - Brake drum

q For 1.2 TDI running gear

9 - Cross-head screw, 4 Nm

10 - Brake drum

q For basic running gear

11 - Wheel hub with wheel bearing

q For basic running gear

q The ABS sensor ring is incorporated in the wheel hub

q Removing and installing → [Chapter](#)

Wheel bearing and wheel hub are combined in one housing.

This wheel bearing/hub unit is maintenance-free and has zero play. There is no provision for adjustment or repair.

12 - Hexagon bolt

q Tightening torques:

q 1.2 TDI running gear: 60 Nm

q Basic running gear: 30 Nm and turn 90° further

q 4x

q With convex washer

q Always renew if removed

13 - Bracket for handbrake cable

q For 1.2 TDI running gear only